

INSTALLATION INSTRUCTIONS

PLASMA DISPLAY STATIC MOUNT

PSM-2150

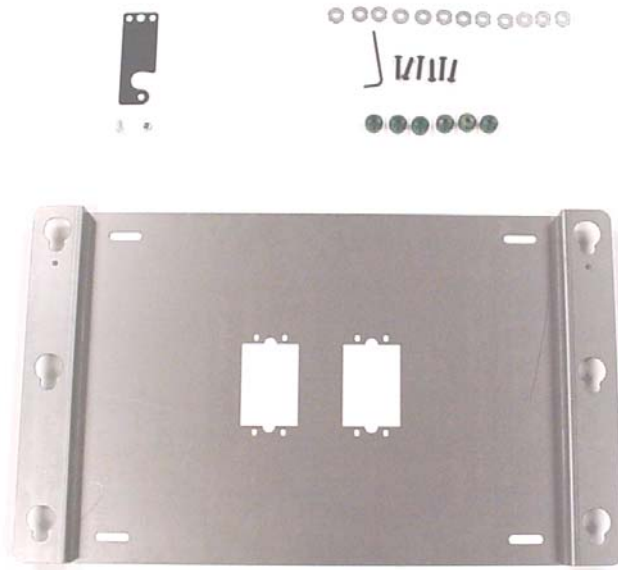


Figure 1

- (1) Bracket, Plasma Mounting, Static
- (6) Mounting Buttons-Green
- (6) M5-.8 x 25mm BHCS
- (1) 3mm Allen Key
- (1) Nylon Washer .5 OD x .313 ID x .031

- (1) Latching Flag
- (1) 10-24 Nylock Nut
- (1) 10-24 x .5 Undercut FH Screw
- (6) Washers Nylon .75 OD x .323 ID x .125

BEFORE PROCEEDING: Unpack the carton, verify contents shown in Figure 1 and read installation instructions completely. If you are missing any of the listed components, please contact Customer Service at 1-800/582-6480.

CAUTION! PLASMA DISPLAYS ARE EXTREMELY FRAGILE.

1. Using a #10-24 flat head cap screw inserted from chamfered hole side of latching flag, Nylon washer between safety latch and mount, and 10-24 Nylock nut, install the safety latch loose enough to move but tight enough to remain in place when raised.
2. Place 1 Nylon spacer under each mounting button, place on mounting holes and attach using the M5-.8 x 25 mm BHCS (see Figure 2).

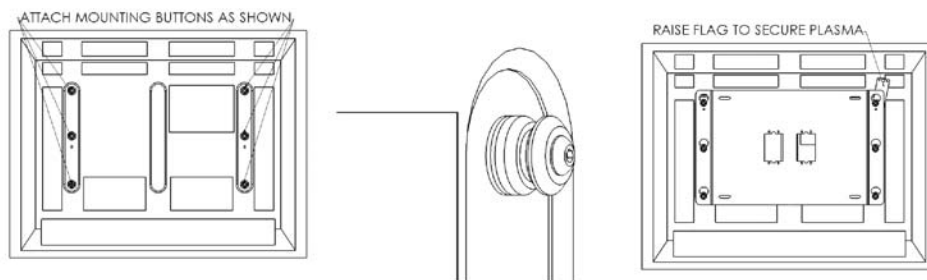


Figure 2



CHIEF MANUFACTURING INC.
1-800-582-6480 952-894-6280 FAX 952-894-6918
 8401 EAGLE CREEK PKWY, STE 700
 SAVAGE, MINNESOTA 55378 USA

8805-000052 Rev01
 2003 Chief Manufacturing
www.chiefmfg.com
 08/04

WARNNG!

ALL COMPONENTS MUST BE SECURELY FASTENED TO A STRUCTURAL MEMBER CAPABLE OF SUPPORTING 4 TIMES THE COMBINED WEIGHT OF ALL COMPONENTS PLUS THE EQUIPMENT BEING MOUNTED. IF IT CANNOT SUPPORT THIS WEIGHT, THE STRUCTURE MUST BE REINFORCED. THE MAXIMUM WEIGHT TO BE INSTALLED ON THE MOUNT IS 175 POUNDS (79.38 KG).

3. Securely anchor plasma static mount to the wall using wall studs or supporting framework (see WARNING).
4. Make sure the flag is lowered to the side before attempting to place the plasma on the mount.
5. With the aid of another person, lift the plasma display up to the mount, align the mounting buttons on the plasma with the teardrop slots in the mount, and set the plasma into place.
6. Position (raise) the flag to secure the plasma.