

INSTALLATION INSTRUCTIONS

PLASMA DISPLAY STATIC MOUNT

PSM-2210 

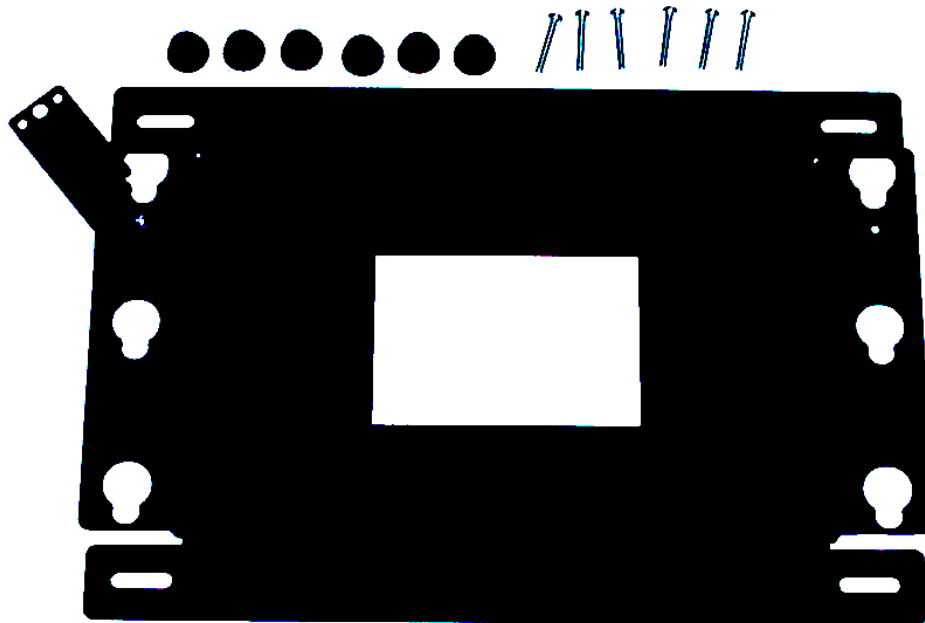


Figure 1

- | | |
|--|----------------------------------|
| (1) Bracket, Plasma Mounting, Static | (1) Latching Flag |
| (1) 10-24 x .5 FH Undercut Screw | (1) Nylon Washer |
| (1) 10-24 Nylock Nut | (6) Mounting Buttons-Black Nylon |
| (6) M5 x 35mm Phillips Head Cap Screws | Stepped for 5mm Screw |

BEFORE PROCEEDING: Unpack the carton, verify contents shown in Figure 1 and read installation instructions completely. If you are missing any of the listed components, please contact Customer Service at 1-800/582-6480.

CAUTION! PLASMA DISPLAYS ARE EXTREMELY FRAGILE.

1. Using a #10-24 flat head cap screw inserted from chamfered hole side of latching flag, Nylon washer between safety latch and mount, and 10-24 Nylock nut, install the safety latch loose enough to move but tight enough to remain in place when raised.
2. Attach mounting buttons to plasma using six M5 x 35 Philips head cap screws provided (see Figure 2 & Figure 3).


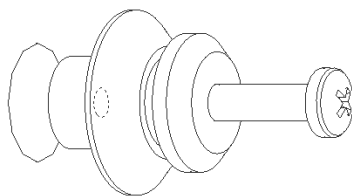


Figure 2



ATTACH MOUNTING BUTTONS IN THESE HOLES

Figure 3

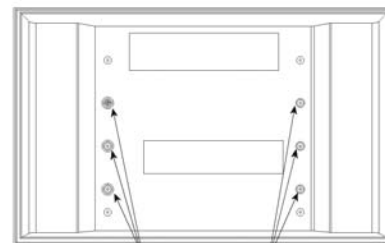


CHIEF MANUFACTURING INC.
1-800-582-6480 952-894-6280 FAX 952-894-6918
12800 HIGHWAY 13 SOUTH, SUITE 500
SAVAGE, MINNESOTA 55378 USA

8805-000061
2003 Chief Manufacturing
www.chiefmfg.com
01/03

WARNING!

ALL COMPONENTS MUST BE SECURELY FASTENED TO A STRUCTURAL MEMBER CAPABLE OF SUPPORTING 4 TIMES THE COMBINED WEIGHT OF ALL COMPONENTS PLUS THE EQUIPMENT BEING MOUNTED. IF IT CANNOT SUPPORT THIS WEIGHT, THE STRUCTURE MUST BE REINFORCED. THE MAXIMUM WEIGHT TO BE INSTALLED ON THE MOUNT IS 175 POUNDS (79.38 KG).

3. Securely anchor plasma static mount to the wall using wall studs or supporting framework (see WARNING).
4. Make sure the flag is lowered to the side before attempting to place the plasma on the mount.
5. With the aid of another person, lift the plasma display up to the mount, align the mounting buttons on the plasma with the teardrop slots in the mount, and set the plasma into place (see Figure 4).
6. Position (raise) the flag to secure the plasma (see Figure 4).

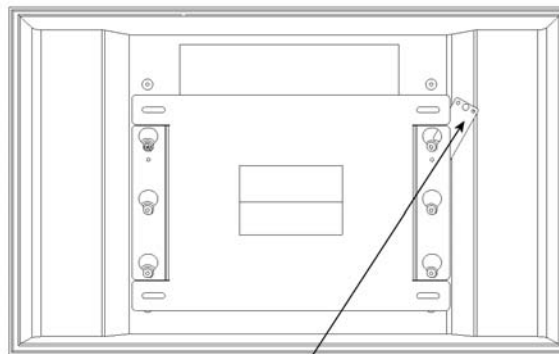

**RAISE FLAG TO SECURE
UNIT**

Figure 4