
INSTALLATION INSTRUCTIONS

ELELG60-PRO Mounting Bracket

Prior to assembly, unpack carton completely and verify contents. If you are missing any of the following components, please contact Technical Support at 1-800-776-5768.

- (1) PLASMA STATIC BRACKET
- (1) ALLEN KEY, M5
- (6) SCREWS, M8-1.25 X 12mm Button Head Cap
- (4) MOUNTING BUTTONS
- (4) SCREWS, 10-24 X .5 Button Head Cap
- (1) ALLEN KEY, 1/8"

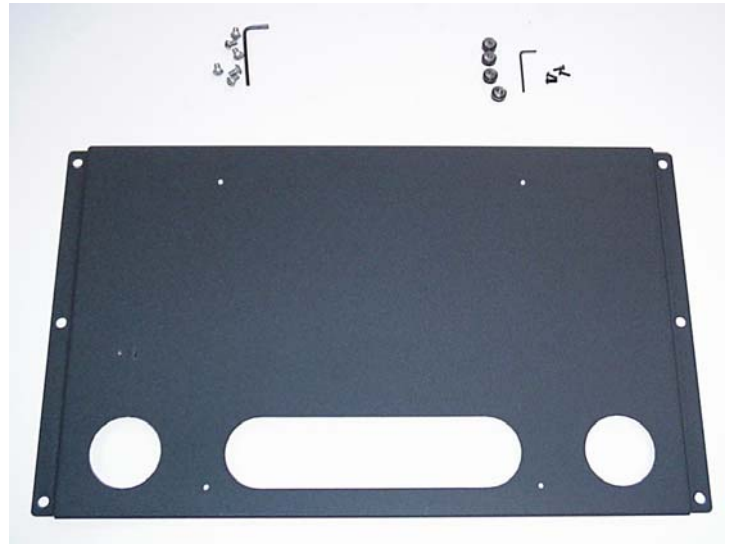


Figure 1

CAUTION: PLASMA DISPLAYS ARE EXTREMELY FRAGILE!

**READ INSTALLATION INSTRUCTIONS COMPLETELY
BEFORE PROCEEDING**



Figure 2

1. Using a 10-24 button head cap screw inserted from the back side of bracket, secure mounting button, to bracket (four places). (See Figure 2). Allen key provided.
2. Align hole pattern on brackets with pattern on back of Plasma Display and attach using the M8 button head cap screws(see Figure 2). Be careful not to over tighten screws.
3. Confirm that the mount latching flags are lowered. With the aid of another person, lift plasma display up to the mount. Align bracket mounting buttons with teardrop slots in the mount and set plasma into place.
4. Raise latching flags on the mount to secure plasma display, making sure latches are completely engaged.